



Warranty Policy

At Gear Beast, our first priority is customer satisfaction. That is why we offer a Lifetime Warranty on all Gear Beast products purchased directly from Gear Beast or authorized resellers. Our Warranty Policy is straightforward: We will replace your product, at our discretion, with any defect in manufacturing workmanship (but not due to customer damage). Our Warranty does not include connected devices, incidental and/or consequential damages of any kind. For any further questions regarding our Warranty, please contact us at warranty@gearbeast.com. Our Warranty Policy is only applicable to the original owner of the product.

Gear Beast Cares

We want you to be 100% satisfied with your Gear Beast product, its use, and our support. We ask that you please read the installation instructions and visit our website for care and warranty information.

If you have any difficulty, please contact us as we are eager to help! Before contacting the retailer or posting negative feedback, please give us the opportunity to correct any issue. Please email us at support@gearbeast.com and we will promptly work with you to resolve your issue.

If you've had a positive experience, we would appreciate if you would post a favorable review on the site you purchased your Gear Beast product from, so other potential buyers can read about your experience with our products.



IMPORTANT

Please read enclosed instructions and conduct water test before using this product.



www.gearbeast.com

Stop & Please Read Before Using the GearDry Waterproof Bag:

This product is intended to provide protection for your phone from water, snow, dust and other elements. It is not intended for underwater photography.

BEFORE USING THIS PRODUCT YOU MUST WATER TEST

Start by placing a tissue in the GearDry Waterproof Bag. Then seal and submerge it in water for 30 minutes (you will need to place something on the bag to keep it weighted down under water). If the tissue is wet when removed please contact us at warranty@gearbeast.com for replacement.

Check the GearDry Waterproof Bag before every use for cuts, tears or damage, especially if it has been dropped or has come in contact with sharp objects that could pierce material.

Do not use in hot tubs, hot springs or any water above 90 degrees Fahrenheit.

Before opening the bag, hold it clip side down to remove excess water. Do not open the bag anywhere where contents could come into contact with water. Wait to open the bag until you are in safe, dry place.

Do not expose the bag to prolonged sun exposure as it could lead to discoloration and deformation.


Warranty does not cover connected devices, incidental and/or consequential damage.

Instructions


- 1 Open the GearDry Waterproof Bag by pulling up on the latches on top of bag.




- 2 Slide mobile phones and other personal items into the bag.

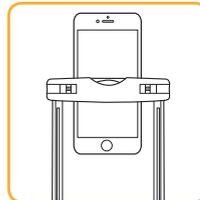

- 3 Push the air out of the bag.

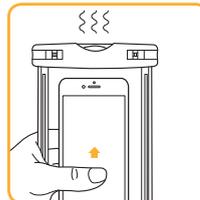

- 4 Before sealing bag, remove any dirt, sand, hair or other debris from the opening that could prevent tight seal. Seal dry bag by pushing down on both latches until flush with case.

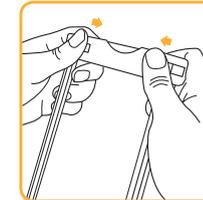

- 5 **For GearDry Sport Armband Only.** Attach built in audio cable inside bag to audio jack on phone. Attach your headphones to adaptor outside of bag.

